

6 × 9 Speaker Enclosures

OWNER'S MANUAL — Please read before using this equipment.

 
Your RadioShack 6 × 9 Speaker Enclosures are designed to hold most 6 × 9-inch, full-range, 2- and 3-way speakers. The enclosures are made of the highest quality materials to ensure maximum response and sound quality in vehicle installations and other areas with limited space.

Note: You need wood screws (not supplied) to install the speakers in the enclosures. Check the number of mounting holes on the speakers' frames to determine how many screws you need. The screw size depends on the type of speaker you install and the type of grille (if any).

MOUNTING THE ENCLOSURES

If you use the enclosures in a vehicle, mount the enclosures in the vehicle before you install the speakers. Use the supplied mounting hardware to mount the enclosures as follows:


1. Drill a 1/4-inch hole at the enclosure's center point.
2. On the mounting surface, use a 1/4-inch drill bit to drill a hole at the center point of the desired mounting location.
3. Place a washer over a 1/4-inch bolt.
4. Place the enclosure on the mounting surface, aligning the enclosure's hole with the hole in the mounting surface. Then, from the inside of the enclosure, insert the bolt through the holes.
5. From the underside of the mounting surface, place a washer and nylon locking nut over the bolt. Then, tighten the nut.
6. Repeat Steps 1–5 to mount the other enclosure.

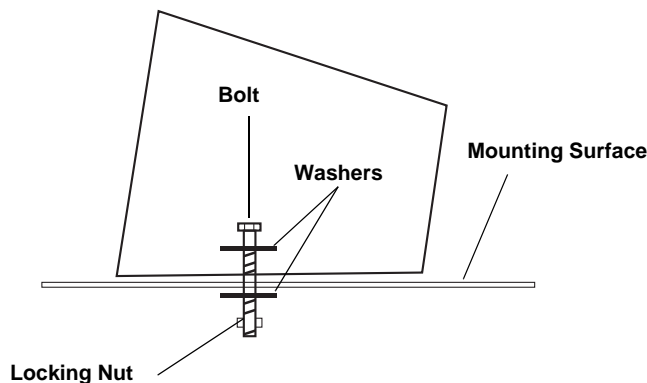

INSTALLING THE SPEAKERS


Follow these steps to install speakers in the enclosures.

 1. Connect the speaker's wires to the enclosure's inside terminals by soldering the wires or by using clip-on terminals. Be sure to connect the wire from the speaker's positive (+) terminal to the enclosure's positive terminal and the wire from the speaker's negative (–) terminal to the enclosure's negative terminal.

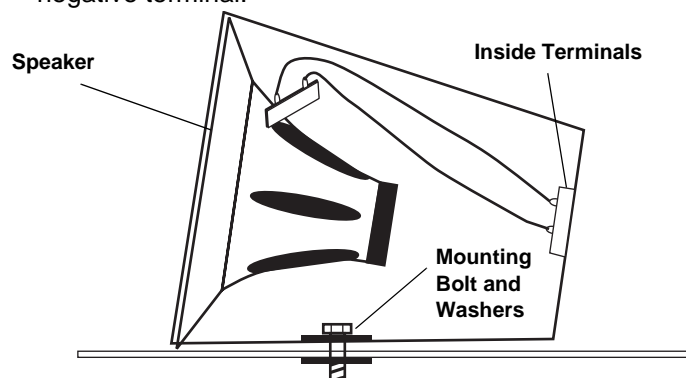

Hint: You can improve the speaker's sound by placing a small amount of loosely packed acoustic insulation inside the enclosure before you go to the Step 2.

 2. Insert the speaker, magnet first, into the enclosure's oval hole. Then, align the speaker as needed.
3. Using the speaker's frame as a template, mark the speaker's mounting holes on the enclosure's face. Then use wood screws (not supplied) to secure the speaker to the enclosure.

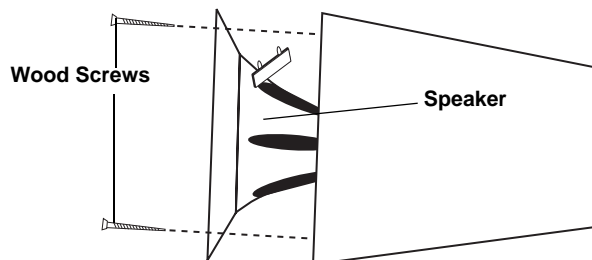

4. If the speaker includes a grille, attach the grille according to its instructions.
5. Connect your sound system's speaker wires to the spring terminals on the back of the enclosure. Be sure you connect system's wires (usually marked + for positive and – for negative) to the corresponding positive and negative terminals on the enclosure.
6. Repeat Steps 1–5 to install the other speaker.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99